

Easy to use!

High Performance!

Great low price!

ATAGO®

Propylene Glycol Checker!!

Digital Hand-held "Pocket" Propylene Glycol Refractometer

PAL-88S, PAL-89S

Cat.No.4488,4489

Application

The "Pocket" Propylene Glycol Refractometers, PAL-88S, and PAL-89S, easily measures Propylene Glycol solutions and display the results digitally. The freezing point of the sample can also be measured and displayed.

Features

- Calibration with water only
- Measurement in 3 seconds
- Extremely water resistant (IP65)
- Light & Compact, 100g
- Ergonomically designed for easy, one-handed operation
- Convenient storage case
- Automatic Temperature Compensation (ATC)
- Designed with a strap holder option

Measuring Method



① Place the sample onto the prism surface.




② Press the START key.



③ The measurement value will be displayed in 3 seconds.



④ ***Secondary Scale:** Press the START key for 2 seconds while the concentration (%) is indicated, to display the freezing point (°C/°F).

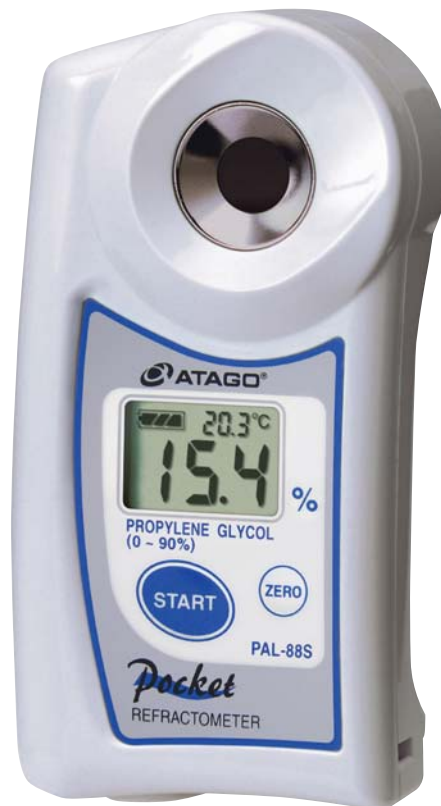

Actual Size

Specifications

	PAL-88S	PAL-89S
Measurement range		
Concentration of Propylene Glycol *Main scale	0.0 to 90.0% (V/V)	0.0 to 90.0% (V/V)
Freezing point of Propylene Glycol *Secondary scale	0 to -50°C	32 to -60°F
Resolution		
Concentration of Propylene Glycol *Main scale	0.2% (V/V)	0.2% (V/V)
Freezing point of Propylene Glycol *Secondary scale	1°C	1°F
Measurement accuracy		
Concentration of Propylene Glycol *Main scale	±0.4% (V/V)	±0.4% (V/V)
Freezing point of Propylene Glycol *Secondary scale	±1°C	±1°F
Measurement temperature	10 to 40°C (Automatic Temperature Compensation)	50 to 104°F
Sample volume	0.3ml or more	
Measuring time	3 seconds	
International Protection Class	IP65 Water Resistant	
Power supply	2×AAA Batteries	
Battery life	Approx 11,000 measurements (When an alkaline battery is used)	
Dimensions and weight	55(W)×31(D)×109(H)mm, 100g (Main Unit only)	

All ATAGO refractometers are designed and manufactured in Japan.

HACCP GMP GLP

ATAGO products comply with HACCP, GMP, and GLP system standards.

ATAGO CO., LTD.

Headquarters: The Front Tower Shiba Koen, 23rd Floor
2-6-3 Shiba-koen, Minato-ku, Tokyo 105-0011, Japan
TEL : 81-3-3431-1943 FAX : 81-3-3431-1945
overseas@atago.net http://www.atago.net/

ATAGO U.S.A., Inc.

TEL : 1-425-637-2107 customerservice@atago-usa.com

ATAGO INDIA Instruments Pvt. Ltd.

TEL : 91-22-2833-8038 / 8076 customerservice@atago-india.com

ATAGO (THAILAND) Co., Ltd.

TEL : 662-982-8718-9 customerservice@atago-thailand.com

ATAGO BRASIL Ltda.

TEL : 55 16 3916-6000 customerservice@atago-brasil.com

ATAGO ITALIA s.r.l.

TEL : 39 2 36557267 customerservice@atago-italia.com

ATAGO CHINA Guangzhou Co., Ltd.

TEL : 86 20-38106065 info@atago-china.com



V.02 1207K Printed in Japan

* Specifications and appearance are subject to change without notice.

novatech
INTERNATIONAL

sales@novatech-usa.com
www.novatech-usa.com

Tel: (866) 433-6682
Tel: (281) 359-8538

Fax: (866) 433-6684
Fax: (281) 359-0084