

LHS/LHSa SERIES Manual

(P.N. 7.00.6.6.0200, Revision B November 2012)

Software version L1.1/LA1.1



1.0 CONTENTS

1.0	CONTENTS.....	1
2.0	INTRODUCTION	2
2.1	FEATURES	2
2.2	TECHNICAL SPECIFICATIONS.....	3
2.3	SAFETY NOTICE	4
2.4	KEY AND PANEL DESCRIPTION.....	5
2.5	DISPLAY INDICATIONS WITH LED.....	6
3.0	OPERATION	6
3.1	SAFETY INSTRUCTIONS.....	6
3.2	BATTERY OPERATION	7
3.3	BASIC OPERATIONS	8
3.4	REMOTE CONTROL UNIT	9
3.5	USER PARAMETERS	9
4.0	CALIBRATION.....	10
5.0	PARTS LIST	11
	WARRANTY INFORMATION	13

2.0 INTRODUCTION

2.1 FEATURES


The LHS/LHSa Series are a range of heavy-duty lower capacity crane scales

The main features include:

- Easy Operation & Rugged construction
- 25mm bright red LED display enabling a good viewing angle.
- 360 degree rotary safety hook and support ring design
- Overload safety up to 150% of model capacity
- Selectable weighing units of kg, Lbs and Newtons (Newtons not available for “a” models)
- Standard and Peak Hold feature
- Internal rechargeable battery fitted as standard
- Auto power off after 30 minutes of non use
- 6Vdc 600ma battery charger
- Strong Die cast Aluminium housing
- Infrared remote control

2.2 TECHNICAL SPECIFICATIONS

Model No	Capacity	Division	Model No	Capacity	Division
LHS-500	500kg	0.1kg	LHS-1000a	1000lb/500kg	0.2lb/0.1kg
LHS-1500	1500kg	0.2kg	LHS-3000a	3000lb/1500kg	0.5lb/0.2kg
LHS-2000	2000kg	0.5kg	LHS- 4000a	4000lb/2000kg	1lb/0.5kg

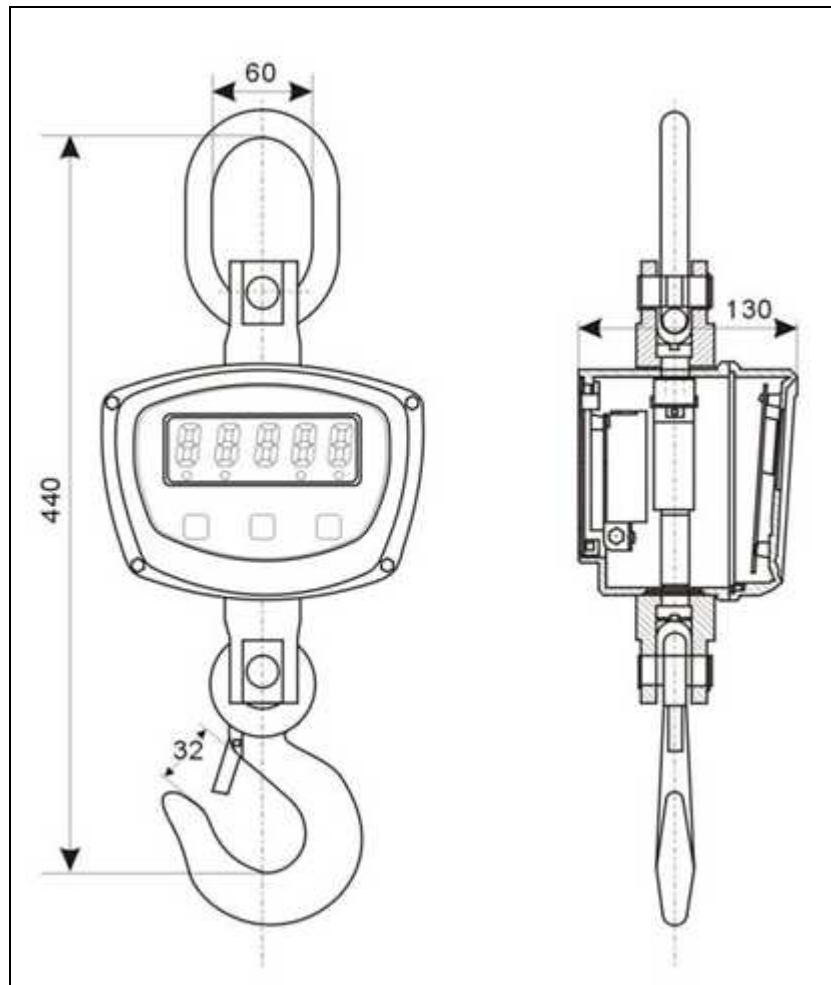

2.3 SAFETY NOTICE

The limit stated below is the Ultimate Overload Limits of the scales.


Adam Equipment Co. Ltd. Its directors, owners and affiliated companies and organisations cannot be held liable for any resulting damage or injury sustained as a result of the machines being used in excess of their stated capacities or ultimate overload limits.

Model No.	LHS 500/1000a	LHS 1500/3000a	LHS 2000/4000a
Max capacity	500kg/1000lb	1500kg/3000lb	2000kg/4000lb
Overload capacity	750kg/1500lb	2000kg/4000lb	2500kg/5000lb

NOTICE:

Do not use the scales if any parts are bent or loose or show signs of damage or wear. Refer to the user manual.

2.4 KEY AND PANEL DESCRIPTION

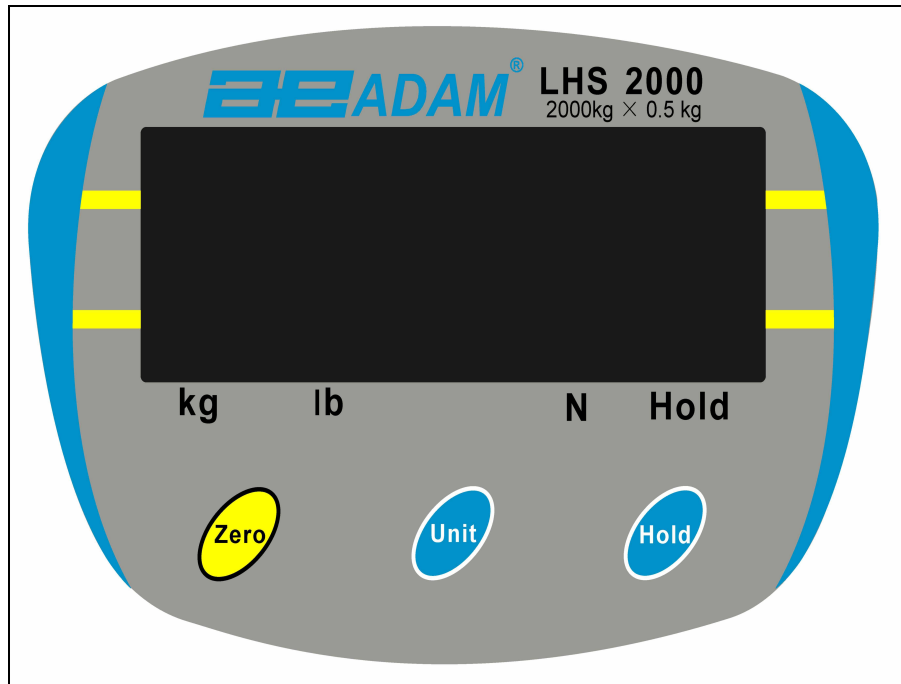

[ON/OFF]	The power switch is located on the rear housing. Use this key to turn the scale ON and OFF.
[Zero]	Press the [Zero] key to return the reading to zero.
[Unit]	Press the [Unit] key to change the weighing unit being displayed between Kg, Lbs and Newtons (Newtons not available for “a” models)
[Hold]	<p>Use this key to activate standard Hold. When pressed, the Hold LED will light at the top left side of the display and the reading on the display will lock and flash. Press the [Hold] key again to cancel the [Hold] function.</p> <p>*When Peak hold is selected from the parameter section the press of the Hold key will activate Peak Hold. The Hold LED will flash and the display will also flash and lock showing the maximum weight registered of a single weighing process.</p> <p>Press the [Hold] key again to cancel the [Hold] function.</p>

2.5 DISPLAY INDICATIONS WITH LED

Kg lb N	The LED will light up in the weighing unit that is being used to indicate when the weight is stable.
Hold	Hold Indicator

3.0 OPERATION

3.1 SAFETY INSTRUCTIONS

Read this manual carefully before you operate the SHS Crane Scale.

- Unpack the Crane Scale carefully from the packaging.
- Attach it to your hoist or equivalent existing equipment securely at the ground level to the support ring in the upright position. Make sure that the equipment to which the scale is attached is in proper condition. The operator should be trained for its safe operation.
- Carry out regular visual inspection for any damage or wear and tear on parts. The split pins in particular at the hook and eyebolts, as well as the inner wall of the hook and all joints should be checked regularly. If any damage or wear has taken place, stop using the scale and replace the parts.
- Do all inspection and maintenance work when the scale is not in use.
- Do not expose the scale to extreme temperatures. The operating temperature range is 0° C to 40° C.
- Secure the sample to be weighed in the hook of the scale. Ensure that the sprung Safety Lever returns to its resting position which prevents the sample from slipping out of the hook.
- Do not exceed the maximum capacity of the Scale.
- Clean and protect your scale after use.

Overload Warning

Please do not add any item that exceeds the maximum capacity of the scale. When the display shows " - - - - ", remove the item to avoid damage to the load cell and scale.

3.2 BATTERY OPERATION

- The rechargeable battery will operate continuously for between 20 and 30 hours before requiring recharging.
- To charge the battery, plug the charger unit into the socket as marked on the rear of the scale. Plug the charger into the mains power supply and wait until the LED on the charger shows green. The battery is now fully charged.
- Charging time for a completely discharged battery is approximately 16 hours. A full battery pack is recommended to keep the scale continuously operational.
- Only use the charger as supplied with the unit.
- The scale will automatically power down after 30 minutes of non use to further protect the battery.
- To replace the battery, turn the locking screw on the battery cover 90 degrees clockwise and lift open the cover. Disconnect and remove the old battery and replace with a new one.
- Contact your dealer for a replacement battery.

3.3 BASIC OPERATIONS

Power on and off

Press the **[ON/OFF]** button to turn the scale on or off. The display on the scale will show the model capacity then countdown from 9 to 0 before displaying zero weight.

Zero the scale

Press the **[Zero]** key so that the display shows zero.

Change the weighing Unit

Press the **[Unit]** key to change the weighing unit

Standard Hold (setting 1)


When the reading may not be perfectly stable or you cannot view a reading easily you can press the **[Hold]** key to lock it. The reading will be locked and also flash at the point you press the **[Hold]** button enabling you to view it when you can. The Hold LED will also light up and once you have noted the reading a press of the **[Hold]** key will return the scale to the normal weighing mode.

Peak Hold (setting 0)

Peak Hold is the highest weight reading registered by the scale when a weighing takes place. Press the **[Hold]** key when the display is at zero and the Hold LED will flash which denotes Peak Hold has been activated. When weight/force is applied to the scale the display will also flash and lock the highest recorded weight of that weighing process. This value and the Hold LED will remain flashing on the display until the **[Hold]** key is pressed again at which point the scale will return to normal weighing mode displaying the current weight on the scale.

Press **[Hold]** again to perform another Peak Hold weighing at any time.

3.4 REMOTE CONTROL UNIT

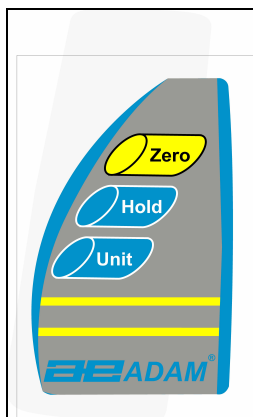

The remote control works via infra red and can be used to operate the SHS from long distances. It operates using 2 x AAA batteries and these can be exchanged by unclipping a cover on the rear of the remote control unit.

3.5 USER PARAMETERS

Five USER parameters are on the SHS, to access these power up the scale and whilst the display is counting down press and then release the **[Unit]** button. The display will show 00000. Use the **[Hold]** and **[Unit]** buttons to enter the code 11111 and then press **[Zero]**. bEE 1 will be displayed. Press the **[Hold]** button to change the setting and the **[Zero]** button to move to the next parameter.

PARAMETER SETTING TABLE

FUNCTION	DESCRIPTION	DEFAULT
BEE	Sets buzzer 0: Disable 1: Enable	1
HOD	Sets the Hold function 0: Peak 1: Standard	1
STB	Sets the Stable function 0: Disable 1: Enable	1
CHT	Sets weighing unit on power up 0: kg 1: Lb's 2: Newtons(Newtons not available for "a" models)	0
YES	Sets save: 0: Not saved 1: Save new settings	0


4.0 CALIBRATION

- Press the **[Zero]** key and power up the scale using the on/off button.
- Release the **[Zero]** key and the display will show “SPAN”. Make sure the hook is empty unless you intend to use any chains, slings etc to hold the calibration mass. Add any items such as these to the hook before continuing.
- Press the **[Zero]** button and the display will show “SET” then “00000” when the reading at zero is stable. This completes the zero calibration.
- Following zero calibration the value of the mass being used to calibrate the scale should be entered. Use the **[Hold]** button to increment the right hand digit, and the **[Unit]** button to move this digit to the left. Proceed by entering a number for the next digit if required, until the value of your chosen calibration weight is displayed correctly.
- Load this mass onto the hook and when the scale is stable press the **[Zero] key**. The display shows **‘HOLD’**.
- After a few seconds, the calibration is complete and the scale returns to normal weighing showing the value of the calibration mass as used.

**** To calibrate in Lbs make sure that the scale is Lbs mode before commencing. To calibrate in Kg make sure the scale is in Kg mode before commencing.**

5.0 PARTS LIST

<u>LHS/LHSa</u>		
<u>Part number</u>	<u>Description</u>	<u>Item No</u>
7.00.1.2.0005	LHS COMPLETE HOUSING – 500kg/1000lb, 1500kg/3000lb	1, 2, 3
7.00.1.2.0012	LHS COMPLETE HOUSING – 2000kg/4000lb	1, 2, 3
7.00.4.0.0083	LHS ON/OFF SWITCH	4
7.00.4.0.0086	LHS POWER CONNECTOR SOCKET	5
7.00.4.0.0084	LHS LEAD ACID BATTERY 6Vdc 3.2ah	6
7.00.1.0.0279	LHS RING SUPPORT	7
7.00.1.0.0273	LHS LOAD CELL - 500kg/1000lb	8
7.00.1.0.0274	LHS LOAD CELL - 1500kg/3000lb	8
7.00.1.0.0275	LHS LOAD CELL - 2000kg/4000lb	8
7.00.1.0.0276	LHS HOOK	9
7.00.4.0.0085	LHS MAIN PCB	10
7.00.5.6.0045	LHS FASCIA PANEL - 500kg	11
7.00.5.6.0046	LHS FASCIA PANEL - 1500kg	11
7.00.5.6.0047	LHS FASCIA PANEL - 2000kg	11
7.00.2.0.0081	LHSa FASCIA PANEL - 1000lb	11
7.00.2.0.0082	LHSa FASCIA PANEL - 3000lb	11
7.00.2.0.0083	LHSa FASCIA PANEL - 4000lb	11
7.00.4.0.0094	LHS KEYBOARD PUSHBUTTON	
7.00.3.0.0025	LHS COMPLETE PACKAGING SET	
7.00.4.0.0109	LHS 6VDC @ 600ma POWER/CHARGER UNIT USA	
7.00.4.0.0110	LHS 6VDC @ 600ma POWER/CHARGER UNIT AUSTRALIA	
7.00.4.0.0111	LHS 6VDC @ 600ma POWER/CHARGER UNIT SA	
7.00.4.0.0087	LHS 6VDC @ 600ma POWER/CHARGER UNIT UK	
7.00.4.0.0088	LHS 6VDC @ 600ma POWER/CHARGER UNIT EU	
7.00.4.0.0090	LHS REMOTE CONTROL UNIT	

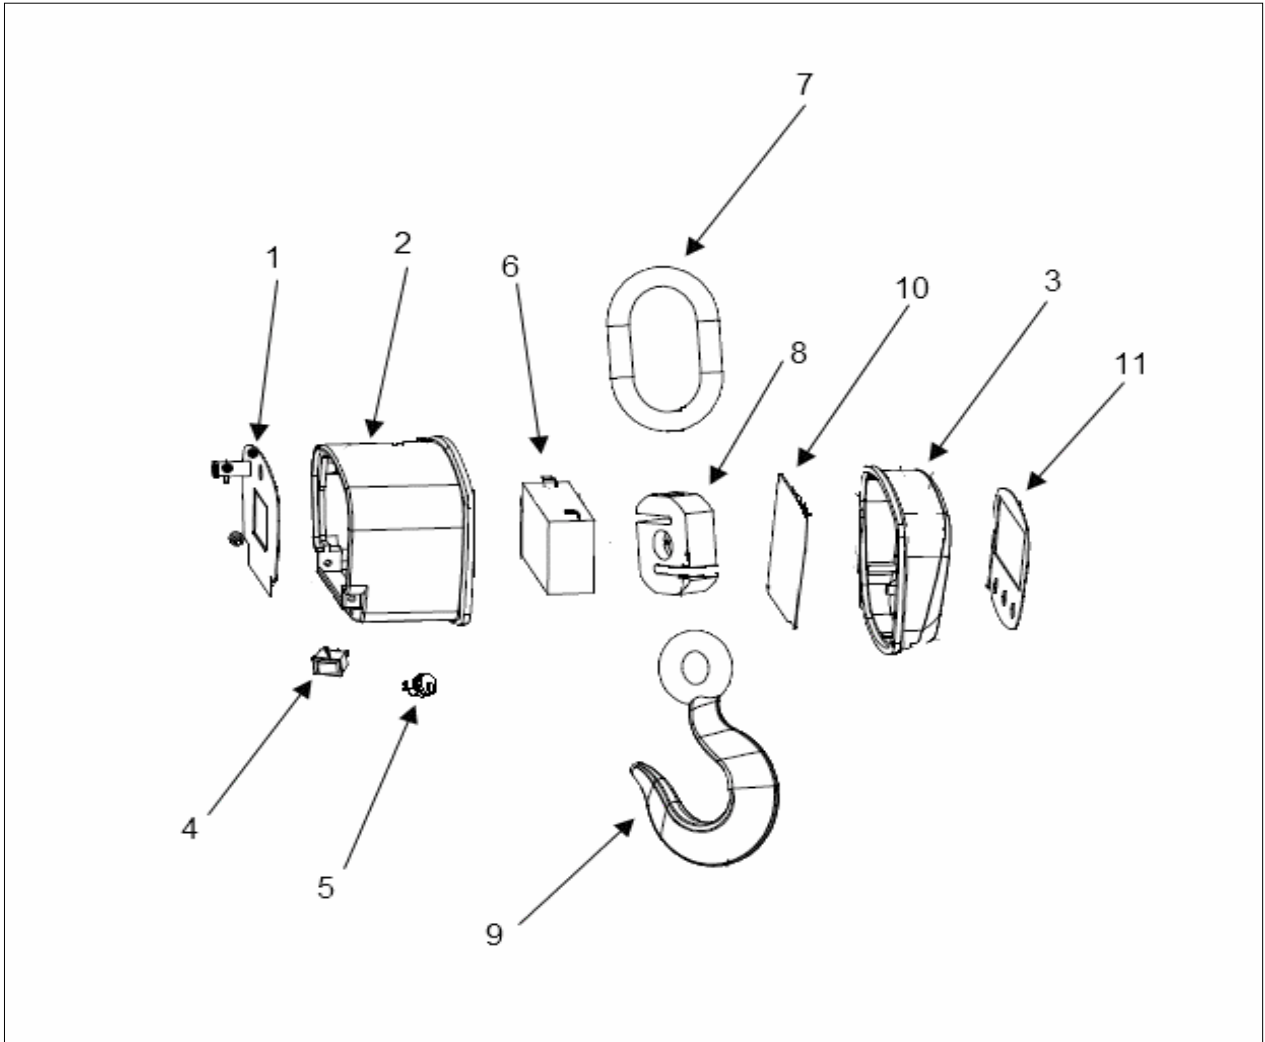

WARRANTY INFORMATION

Adam Equipment offers Limited Warranty (Parts and Labour) for any components that fail due to defects in materials or workmanship. Warranty starts from the date of delivery.

During the warranty period, should any repairs be necessary, the purchaser must inform its supplier or Adam Equipment Company. The company or its authorised Technician reserves the right to repair or replace the components at any of its workshops at no additional cost, depending on the severity of the problems. However, any freight involved in sending the faulty units or parts to the Service Centre should be borne by the purchaser.

The warranty will cease to operate if the equipment is not returned in the original packaging and with correct documentation for a claim to be processed. All claims are at the sole discretion of Adam Equipment.

This warranty does not cover equipment where defects or poor performance is due to misuse, accidental damage, exposure to radioactive or corrosive materials, negligence, faulty installation, unauthorised modifications or attempted repair, or failure to observe the requirements and recommendations as given in this User Manual.

This product may include a rechargeable battery that is designed to be removed and replaced by the user. Adam Equipment warrants that it will provide a replacement battery if the battery manifests a defect in materials or workmanship during the initial period of use of the product in which the battery is installed.

As with all batteries, the maximum capacity of any battery included in the product will decrease with time or use, and battery cycle life will vary depending on product model, configuration, features, use, and power management settings. A decrease in maximum battery capacity or battery cycle life is not a defect in materials or workmanship, and is not covered by this Limited Warranty.

Repairs carried out under the warranty do not extend the warranty period. Components removed during warranty repairs become company property.

The statutory rights of the purchaser are not affected by this warranty. The terms of this warranty is governed by the UK law. For complete details on Warranty Information, see the terms and conditions of sale available on our web-site.

**EU Declaration of Conformity / Déclaration de conformité / Konformitätserklärung
Declaración de Conformidad / Dichiarazione di conformità**



16

Year CE marking was first affixed to declared product

LHS DIGITAL ELECTRONIC CRANE SCALE SERIES



Adam Equipment Co. Ltd.

Maidstone Road, Kingston
Milton Keynes, MK10 0BD

Tel: +44 (0) 1908 274545
Fax: +44 (0) 1908 641339

United Kingdom

Email: sales@adamequipment.co.uk

www.adamequipment.com

We declare under our sole responsibility that the balance models listed below marked with "CE" are in conformity with the directives and standards mentioned.

Nous déclarons sous notre seule responsabilité, que les types de balance cités ci-dessous munis de la mention "CE" sont conformes aux directives et aux normes mentionnées ci-après.

Wir erklären in alleiniger Verantwortung, dass die untenstehenden Waagentypen gekennzeichnet mit "CE" mit den genannten Richtlinien und Normen übereinstimmen.

Nosotros declaramos bajo responsabilidad exclusiva que los modelos de balanzas indicados a continuación con el distintivo "CE" son conformes con las directivas y normas citadas.

Noi dichiariamo sotto nostra unica responsabilità che i tipi di bilance specificati di seguito contrassegnati con la marcatura "CE" sono conformi alle direttive e norme citate.


Adam Equipment Model LHSxxxx hanging crane scales.

2014/30/EU	EN61326-1:2013 – Part 1
2014/35/EU	EN61010-1:2010 – Part 1:
2011/65/EC, RoHS 2	EN50581: 2012,
2006/42/EC	Supply of Machinery (Safety) Regulations 2008

Signed for and on behalf of: Adam Equipment Company Ltd.
United Kingdom, 20 Feb 2016

Clive Jones, Quality & Product Manager.

WEEE 2012/19/EU

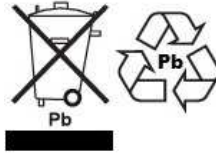

This device may not be disposed of in domestic waste. This also applies to countries outside the EU, per their specific requirements. Disposal of batteries (if fitted) must conform to local laws and restrictions.
Cet appareil ne peut être éliminé avec les déchets ménagers. L'élimination de la batterie doit être effectuée conformément aux lois et restrictions locales.
Dieses Gerät nicht mit dem Hausmüll entsorgt.
Dispositivo no puede ser desechado junto con los residuos domésticos
Dispositivo non può essere smaltito nei rifiuti domestici.

FCC / IC CLASS A DIGITAL DEVICE EMC VERIFICATION STATEMENT

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules and Canadian ICES-003/NMB-003 regulation. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CALIFORNIA PROPOSITION 65 - MANDATORY STATEMENT

WARNING: This product includes a sealed lead-acid battery which contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.



Adam Equipment products have been tested with, and are always supplied with mains power adaptors which meet all legal requirements for the intended country or region of operation, including electrical safety, interference and energy efficiency. As we often update adaptor products to meet changing legislation it is not possible to refer to the exact model in this manual. Please contact us if you need specifications or safety information for your particular item. Do not attempt to connect or use an adaptor not supplied by us.

ADAM EQUIPMENT is an ISO 9001:2008 certified global company with more than 40 years' experience in the production and sale of electronic weighing equipment.

Adam products are predominantly designed for the Laboratory, Educational, Health and Fitness, Retail and Industrial Segments. The product range can be described as follows:

- Analytical and Precision Laboratory Balances
- Compact and Portable Balances
- High Capacity Balances
- Moisture analysers / balances
- Mechanical Scales
- Counting Scales
- Digital Weighing/Check-weighing Scales
- High performance Platform Scales
- Crane scales
- Mechanical and Digital Electronic Health and Fitness Scales
- Retail Scales for Price computing

For a complete listing of all Adam products visit our website at
[**www.adamequipment.com**](http://www.adamequipment.com)

<p>Adam Equipment Co. Ltd. Maidstone Road, Kingston Milton Keynes MK10 0BD UK Phone:+44 (0)1908 274545 Fax: +44 (0)1908 641339 e-mail: sales@adamequipment.co.uk</p>	<p>Adam Equipment Inc. 1, Fox Hollow Rd. 06478 USA Phone: +1 203 790 4774 Fax: +1 203 792 3406 e-mail: sales@adamequipment.com</p>	<p>AE Adam GmbH. Instenkamp 4 D-24242 Felde Germany Phone +49 (0)4340 40300 0 Fax: +49 (0)4340 40300 20 e-mail: sales@adamequipment.co.za</p>
<p>Adam Equipment S.A. (Pty) Ltd. 7 Megawatt Road, Spartan EXT 22 Kempton Park, Johannesburg, Republic of South Africa Phone +27 (0)11 974 9745 Fax: +27 (0)11 392 2587 e-mail: sales@adamequipment.co.za</p>	<p>Adam Equipment (S.E. ASIA) PTY Ltd 2/71 Tacoma Circuit CANNING VALE 6155 Perth Western Australia Phone: +61 (0) 8 6461 6236 Fax +61 (0) 8 9456 4462 e-mail: sales@adamequipment.com.au</p>	<p>Adam Equipment (Wuhan) Co. Ltd. A Building East Jianhua Private Industrial Park Zhuanyang Avenue Wuhan Economic & Technological Development Zone 430056 Wuhan P.R.China Phone: + 86 (27) 59420391 Fax + 86 (27) 59420388 e-mail: info@adamequipment.com.cn</p>

© Copyright by Adam Equipment Co. All rights reserved. No part of this publication may be reprinted or translated in any form or by any means without the prior permission of Adam Equipment.

Adam Equipment reserves the right to make changes to the technology, features, specifications and design of the equipment without notice.

All information contained within this publication is to the best of our knowledge timely, complete and accurate when issued. However, we are not responsible for misinterpretations which may result from the reading of this material.

The latest version of this publication can be found on our Website.

[**www.adamequipment.com**](http://www.adamequipment.com)