



PanGuard

Prevents Unexpected Overflows

Certified Green Drain Pan Treatment PanGuard works simply by placing it in the drain pan. When water touches the strip, the non-dissolving polymer core releases cleaning agents, that keep pans and drain lines clean.

- -Certified Green Product
- Prevents buildup, clogging, and overflows
- Non-dissolving
- Trusted for over 20 years
- -Time-Release
- -Continual Cleaning action



Continual cleaning action with:

- Superior cleaning agents
- Dispersants to break up and remove dirt
- Wetting agents to penetrate deposits
- -Corrosion inhibitor to protect galvanizing

Certified Green:

- Biodegradable
- -Causes no ozone depletion
- Reduces six-fold the impact on earth's natural resources
- -Contains no environmentally harmful substances
- Reduces the use of operational maintenance labor
- -Complies with substantial additional restrictions on ingredients, packaging and oxidizing/flammability requirements

For Use in the Drain Pans of:

- AC units
- Coolers
- Refrigerators
- Ice Machines
- •Overhead Air Units**

**Not for use in liebert units

Controlled Release Technologies 1016 Industry Dr Shelby, NC, 28152

cs@cleanac.com (800)766-9057 www.cleanac.com






TECHNICAL DATA

Perfomance

There are obvious reasons for the superior performance of PanGuard over the other products. It's timed-release formulation puts it head and shoulders over other products and improvements do not stop there. Our superior cleaning agents make PanGuard your best buy.

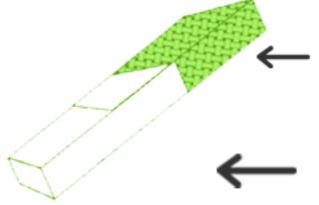

Bright green knit enclosure lets water pass through to contact all of the surfaces.

Non-dissolving polymer core with:

- Superior cleaning agents
- Dispersants to break up and remove dirt
- Wetting agents to penetrate deposits
- -Corrosion inhibitor to protect galvanizing

Ingredients

A blending of wetting agents, surfactants, detergents, and our exclusive corrosion inhibitor.

Physical Characteristics

- -Slim strip design releases cleansers over a greater expanse of the pan surface, allowing the condensate to carry the cleaners into the entire pan, not just a small area
- •Flexible polymer aids in placement of the product into hard to reach places
- -Retains a constant weight in water, so it won't float away
- -Water permeable fabric enclosure helps keep the product intact and visible for easy removal
- -Leaves no chemical residue in the pan
- -Engineered for all sizes of air conditioning pans

Air Stream

The ingredients are not volatile and will not travel through the air stream.

