

*Series*



*Metering Pumps*



250 ml  
KIMAX  
USA



**LMI**  
**MILTON ROY**


# Series G

The SD & SG metering pumps offer a high level of reliability with outstanding value for applications up to 175 psi (12 Bar).

LMI has combined heavy-duty industrial drive technology with state-of-the-art design and manufacturing processes in creating the Series G metering pump.

This family of Mechanically Actuated Diaphragm metering pumps is designed for durability and cost effectiveness.

Illustrated to the right is a SD4 with a PVC liquid end, featuring NPT connections.

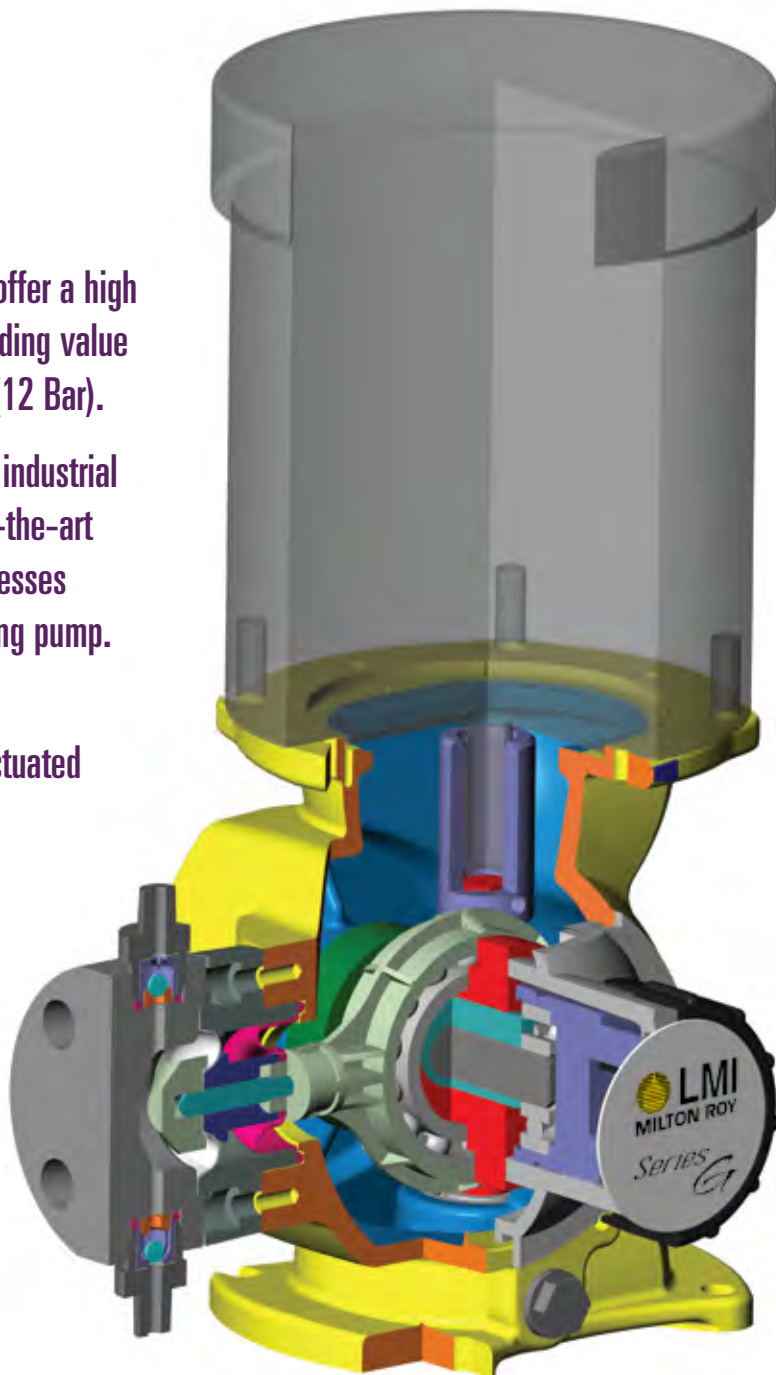

## Series G Features and Specifications

- Flow Rates up to 312 GPH (1180 Liters/hr)
- Mechanically Actuated Diaphragm liquid end eliminates flow restrictions
- Durable, metallic housing designed to withstand tough environments
- High efficiency motors minimize heat buildup
- A robust metallic, worm gear drive coupled with the industrial duty variable eccentric stroke adjustment mechanism yields a 10 to 1 turn down ratio with smooth velocity profiles as compared to the pulsating flows of solenoid pumps or lost motion designs.
- The PTFE, high performance, diaphragm design increases diaphragm life by eliminating the stresses inherent in most designs
- Reliable low flow performance is a result of high performance check valves with machined seats
- All gear components operate in an oil bath for long life
- Precision stroke adjustment can be operated while the pump is running or stopped
- Steady State Accuracy -  $\pm 1\%$  of full capacity over the 10 to 1 turndown ratio
- Liquid Temperature Range - 14° to 122° F (-14° to 50° C)
- Coating - 2 part epoxy
- Average Weight - Frame D: 45 lbs (20 kgs)  
Frame G: 105 lbs (48 kgs)
- Relevant model codes are ETL Certified to conform to ANSI/NSF Std 50




## Pump Selection by Capacity and Pressure

Pump Selection Series G			Maximum Ratings						
Frame	Liquid End	Gear Code	Capacity@60Hz (1725 RPM)		Capacity@50Hz (1425 RPM)		Pressure		
			GPH	Liter/Hr	GPH	Liter/Hr	PSI	Bar	
D	2	1	0.18	0.7	0.15	0.6	175	12	Ratings based on 1/4 HP (.25 kW)
		2	0.35	1.3	0.29	1.1			
		6	0.48	1.8	0.40	1.5			
		3	0.7	2.6	0.58	2.2			
	4	1	3.0	11	2.5	9.5	150	10	
		2	6.6	25	5.5	21			
		6	10	38	6.9	26			
		3	14.4	45	12	45			
	7	1	13	49	10	39	100	7	
		2	25	95	21	79			
		6	34	129	28	106			
		3	50	189	42	159			
	8	1	31	117	26	98	75	5	
		2	57	216	47	178			
		6	87	329	72	273			
		3	127	481	106	401			
G	5	1	26	98	22	82	150	10	Ratings based on 1 HP (.75 kW)
		2	53	201	44	167			
		6	75	284	62	237			
		3	106	401	88	334			
		8	—	—	110	416			
	6	1	37	140	31	117	100	7	
		2	74	280	62	233			
		6	104	394	87	328			
		3	147	555	122	464			
		8	—	—	154	583			
	7	1	75	284	62	237	50	3.5	
		2	150	568	125	473			
		6	208	787	173	656			
		3	300	1136	250	946			
		8	—	—	312	1181			



Optional degassing valve for SD 7, SD 8 & SG 5 is p/n 61411

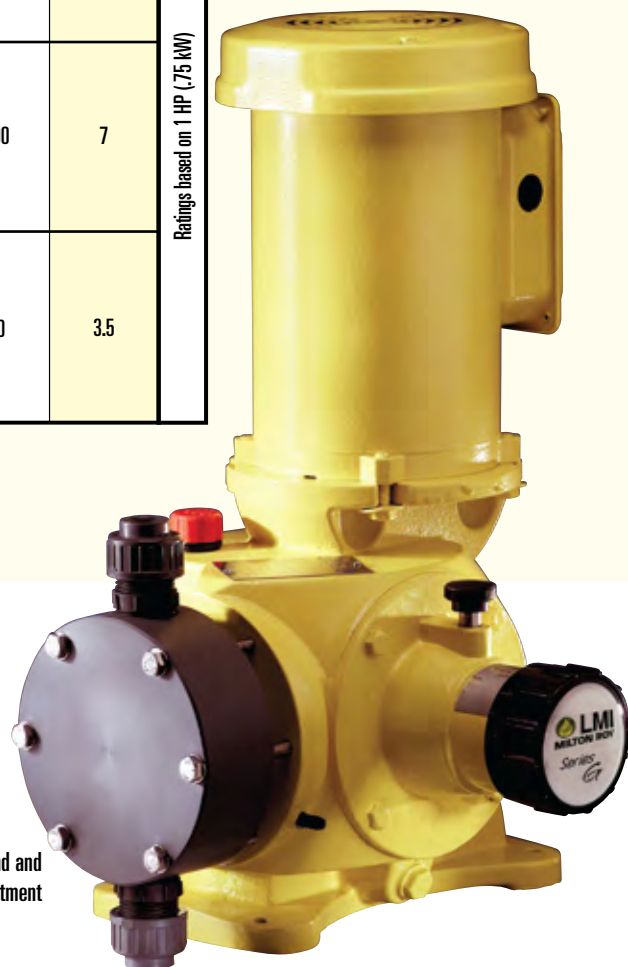

The LMI SG7 with PVC liquid end and manual micrometer stroke adjustment

## Series G Product Code

S

Frame Gear Ratio Motor &/ or Mount Liquid End Material Connections

### Frame

#### D Frame

D2

D4

D7

D8

#### G Frame

G5

G6

G7

### Gear Ratio Code

1 = 43 SPM

2 = 86 SPM

6 = 120 SPM

3 = 173 SPM

8 = 180 SPM @ 1425 RPM  
(SG only)

### Motor &/or Mount

8 = 1 ph 60 Hz 115/230 VAC 1725 RPM TE

J = 3 ph 60 Hz 230/460 VAC 1725 RPM TE

9 = 1 ph 50 Hz 115/230 VAC 1425 RPM TE

L = 3 ph 50 Hz 220/380 VAC 1425 RPM TE

X = Nema 56C Mount

Less Motor

P = DC Motor with Variable Speed Drive

### Liquid End Material

4 = Polypropylene

2 = PVDF

7 = 316 SS

8 = PVC

P = Polymer Service

L = Slurry Applications

N = H<sub>2</sub>SO<sub>4</sub> Applications

### Connections

P = NPT

### Optional Degassing Valve Information. Use only with PVC Liquid end.

Series G	Frame	No Fitting
SD	2	39672
	4	39672

Supplied with 10' of 1/4" Polyethylene Tubing

Series G	Frame	Valve w/Adapter
SD*	7	61411
	8	61411
SG*	5	61411
	6	61421
	7	61421


\* Connection 1/4 NPT F



The photograph to the right is a SD4 with a PVC liquid end, featuring a Degassing Valve - p/n 39672

## Dimensions

Approximate for envelope estimations. Certified prints are available.  
Dimensions are showing for both D and G Frames in inches.

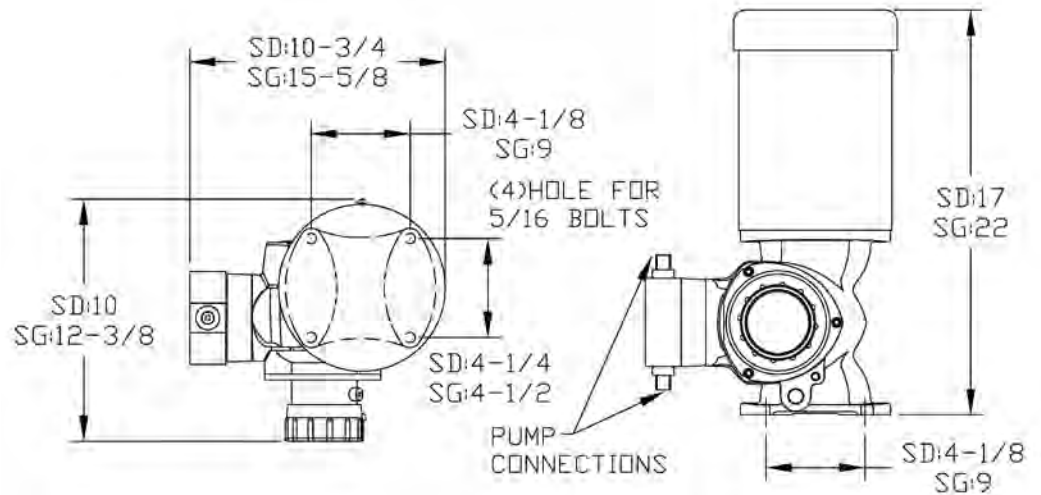

## NPT Connection Sizes



Frame	Liquid End Size	Connection Port Size for the following materials				
		PP, PVC & PVDF	Polymer	Applications Slurry	HSO4	316SS
D	2	1/4" Male	N/A	1/4" Male	1/4" Male	
	4		1/2" Male		1/2" Male	
	7 & 8	1/2" Female				
G	5	1" Female	1" Male	1" Female	1" Male	
	6 & 7					

## Materials of Construction

Material	Frame	Liquid End Size	Head	Diaphragm Cap	Check Valve Body	Seals	Seats	Balls	Diaphragm
Polypropylene (PP)	G	5	PP	PP	PVDF	Viton	PVC	Ceramic	PTFE
		6			PVC				
PVC***	D	2*	PVC	PVC	PVDF	Atlas	Alloy C22		
		4*					PTFE		
		7 & 8				Viton	PVC		
	G	5			PVC				
		6 & 7							
PVDF	D	2*	PVDF	PVDF	PVDF	Atlas	Alloy C22		
		4*					PTFE		
		7 & 8				PTFE	PVDF		
	G	All							
Polymer Applications**	D & G	All	PVC		PVDF	Viton	316 SS	316 SS	
Slurry Applications	D	4	316 SS	PVC	316 SS				
	D	7 & 8	PVC						
	G	All							
H2SO4 Applications	D & G	All	PVC	PVC	PVDF	Atlas/Viton	CA 20	CA 20	
316 SS***	D	2	316 SS	316 SS	316 SS	PTFE	316 SS	316 SS	
		4					316 SS		
		7 & 8				Viton	316 SS		
	G	5							
		6 & 7							

\* Note: A polyethylene dimensional spacer is used in all plastic D2 and D4 check valves.

\*\* Hastalloy C spring

\*\*\* ETL Certified to conform to ANSI/NSF STD 50 when using these liquid end materials.

## Series G, Dependable and Versatile



The LMI Series "G" pump has proven its exceptional value over years of solid performance in a wide range of applications and industries. Water treatment chemicals, process additives, acids, out-gassing fluids, slurries, and many more applications are all handled with ease by this robust metering pump design. Your local distributor can assist you in applying the SD & SG metering pumps to your process.

## Accessories



**Safety Valves**  
Protect pump and piping from overpressure.



**Back Pressure Valves**  
Provide smooth, artificial pressure in pump discharge line for atmospheric or low pressure systems to ensure pumping accuracy.



**Pulsation Dampeners**  
Minimize pressure and flow surges in the pump discharge. When applied to pump inlet, more favorable NPSH conditions result.



**Calibration Columns**  
Allow periodic verification of pump performance during routine checks or after system maintenance.



201 Ivyland Road • Ivyland, PA 18974-0577 • ph: 215.293.0401 • fax: 800.327.7563  
www.lmipumps.com • email: info@lmipumps.com



sales@novatech-usa.com  
www.novatech-usa.com  
Tel: (866) 433-6682 Fax: (866) 433-6684  
Tel: (281) 359-8538 Fax: (281) 359-0084