

PFS Injection Quills



PFS Injection Quills have been developed to allow chemical injection into the center stream of the flow. This ensures the dispersion of chemical in a more uniform manner, providing for a more homogenous mix in the pipeline.

Standard features include:

- 6 materials of construction
- 2 standard sizes available 6" or 8"
- threaded or socket connections
- built in spring loaded check valve
- standard 1/8" orifice discharge and optional 1/4" for higher flow
- pressure range to 3000 PSIG
- temperatures to 260°C (500°F)
- custom materials and sizes available on request

For detailed product information visit our website: primaryfluid.com



PFS Injection Quills

For detailed product information visit our website: primaryfluid.com
CRN certification available. Contact factory.

Sizing and Ordering Information

Model	Size (length)	Body Material	Ball Check Material	Check Spring Material	Pressure* Max. PSIG	Temperature Max.
IQ-56-PVC	6"	PVC	Ceramic	316S/S	150	140°F(60°C)
IQ-56-CPVC	6"	CPVC	Ceramic	316S/S	150	210°F(98°C)
IQ-56-PP	6"	PP	Ceramic	316S/S	150	195°F(90°C)
IQ-56-PVDF	6"	PVDF	Ceramic	316S/S	150	260°F(125°C)
IQ-56-316S/S	6"	316S/S	316S/S	316S/S	3000	500°F(260°C)
IQ-56-HastC	6"	Hastelloy	Hastelloy	Hastelloy	3000	500°F(260°C)
IQ-58-PVC	8"	PVC	Ceramic	316S/S	150	140°F(60°C)
IQ-58-CPVC	8"	CPVC	Ceramic	316S/S	150	210°F(98°C)
IQ-58-PP	8"	PP	Ceramic	316S/S	150	195°F(90°C)
IQ-58-PVDF	8"	PVDF	Ceramic	316S/S	150	260°F(125°C)
IQ-58-316S/S	8"	316S/S	316S/S	316S/S	3000	500°F(260°C)
IQ-58-HastC	8"	Hastelloy	Hastelloy	Hastelloy	3000	500°F(260°C)

Notes and Options:

* maximum pressure @ 70°F(21°C) working temperature

Hastelloy C springs available. Suffix model number with -H for this option (e.g. IQ-56-PVC-H)


Hastelloy C ball check available. Suffix model -I (e.g. IQ-56-PVC-I)

PVDF ball check available. Suffix model -K (e.g. IQ-56-PVC-K)

TFE ball check available. Suffix model -T (e.g. IQ-56-PVC-T)

CRN certification, other materials of construction and bubble tight/resilient seat check valves available on request. Please contact factory.

Dimensional Information

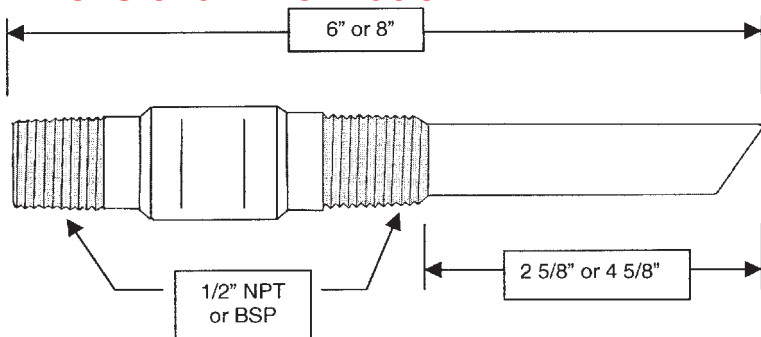


Capacities at Given Pressure (US and Metric)

Pressure psi	kPa	Flow Rate			
		1/8" Bore		1/4" Bore	
		USGPM	LPM	USGPM	LPM
20	138	0.05	0.19	2.62	9.92
30	207	1.25	4.73	3.98	15.07
40	276	1.55	5.87	4.77	18.06
50	345	1.90	7.19	5.59	21.14
60	414	2.20	8.33	6.39	24.19
70	483	2.48	9.39	7.30	27.63
80	552	2.72	10.30	8.10	30.66
90	621	2.97	11.24	8.82	33.39
100	689	3.21	12.15	9.48	35.87

Note: Quills have standard 1/8" discharge orifice for high velocity discharge. Optional 1/4" discharge orifice available for higher capacity flow.

Typical Metering Pump System

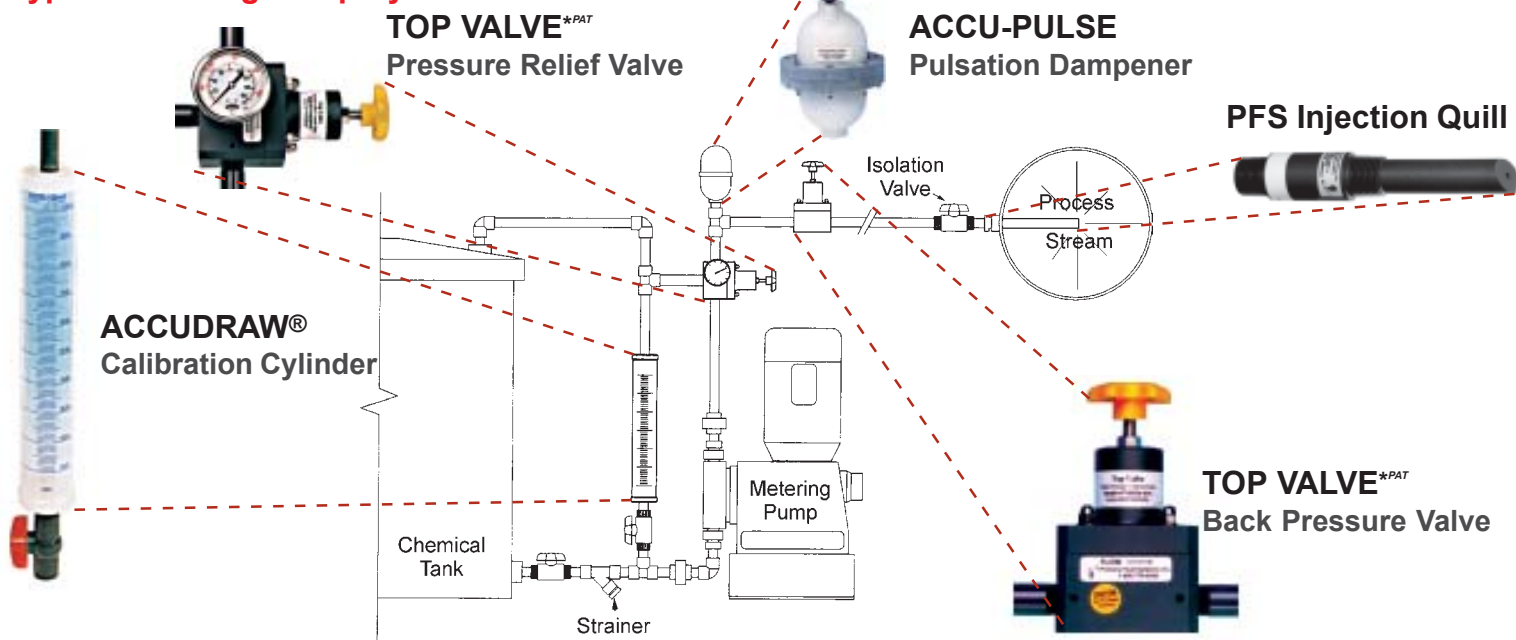

novatech
INTERNATIONAL

sales@novatech-usa.com
www.novatech-usa.com
Tel: (866) 433-6682 Fax: (866) 433-6684
Tel: (281) 359-8538 Fax: (281) 359-0084



PRIMARY FLUID
SYSTEMS INC.

Distribution Territories Available

Call Toll Free 1-800-776-6580

Tel: (905) 333-8743

Fax: (905) 333-8746

E-Mail: primary@primaryfluid.com

www.primaryfluid.com

*PAT 5,857,486/5,944,050
® Registered Trade Mark of Primary Fluid Systems

