

PULSAFEEDER®

The Pulsatron Series T7 was designed to feed chemical products on a timed schedule. Typical applications include the feed of biocides in open-air cooling towers. The feed cycle is initiated and controlled by the programmable timer. The Series T7 provides everything you need in one unique, compact package to create a simple and cost effective metering system for timed applications.


A 7-day programmable timer controls the Series T7. The timer is programmable in 1-minute increments with up to 8 on/off cycles per day. Each timed event can be set to run any day of the week on a 7-day cycle. Other control features include a standby mode, continuous 'ON' mode and the ability to adjust the stroke length from 0 to 100%.

Four distinct models are available, having pressure capabilities to 100 PSIG (7.0 BAR) @ 12 GPD (1.9 lph), and flow capabilities to 48 GPD (7.6 lph) @ 50 PSIG (3.3 BAR), with a turndown ratio of 10:1. Metering performance is reproducible to within $\pm 3\%$ of maximum capacity.

Features

- Complete Timer Control in one unique package.
- Solid State 7 Day Electronic Timer.
- Isolated from Earth Ground.
- Few Moving Parts and Wall Mountable.
- Safe & Easy Priming with durable leak-free bleed valve assembly (standard).

Controls

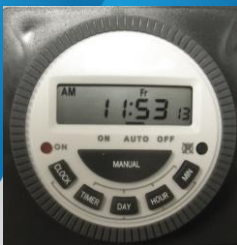

7 Day Programmable Timer

- Program up to 8 On/Off Events Per Day
- Timed Events Can Be Set To Run Any Day Of The Week In A 7-Day Cycle.



Manual Stroke Length

- Turn-Down Ratio 10:1



Aftermarket

- KOPkits
- Gauges
- Dampeners
- Pressure Relief Valves
- Tanks
- Pre-Engineered Systems
- Process Controllers (MicroVision)



PULSAtron® Series T7
Electronic Metering Pumps

PULSAtron® Series T7

Specifications and Model Selection

MODEL		LC13BA	LC14BA	LC64BA	LC44BA
Capacity nominal (max.)	GPH	0.50	1.00	1.25	2.00
	GPD	12	24	30	48
Pressure (max.)	LPH	1.9	3.8	4.7	7.6
	PSIG	100	100	100	50
Connections:	BAR	7	7	7	3.3
	Tubing	1/4" ID X 3/8" OD			

Engineering Data


Pump Head Materials Available:	GFPPPL PVC PVDF 316 SS
Diaphragm:	PTFE-faced CSPE-backed
Check Valves Materials Available:	
Seats/O-Rings:	PTFE CSPE Viton
Balls:	Ceramic PTFE 316 SS Alloy C
Fittings Materials Available:	GFPPPL PVC PVDF
Bleed Valve:	Same as fitting and check valve selected, except 316SS
Injection Valve & Foot Valve Assy:	Same as fitting and check valve selected
Tubing:	Clear PVC White PE

Important: Material Code - GFPPPL=Glass-filled Polypropylene, PVC=Polyvinyl Chloride, PE=Polyethylene, PVDF=Polyvinylidene Fluoride, CSPE=Generic formulation of Hypalon, a registered trademark of E.I. DuPont Company. Viton is a registered trademark of E.I. DuPont Company. PVC wetted end recommended for sodium hypochlorite.

Dimensions

Series T7 Dimensions (inches)						
Model No.	A	B	C	D	E	Shipping Weight (lbs.)
LC13BA	5.0	9.6	9.5	6.5	8.2	10
LC14BA	5.0	9.9	9.5	6.5	8.5	10
LC64BA	5.0	9.9	9.5	6.5	8.5	10
LC44BA	5.4	10.6	11.3	7.4	9.2	11.8

NOTE: Inches X 2.54 = cm

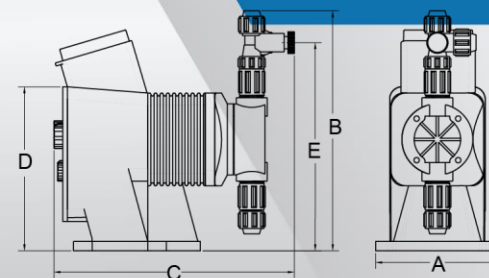

Engineering Data

Reproducibility:	+/- 3% at maximum capacity
Stroke Length Turn-Down Ratio:	10:1
Power Input:	115 VAC/50-60 HZ/1 ph 230 VAC/50-60 HZ/1 ph
Average Current Draw:	
@ 115 VAC; Amps:	0.6 Amps
@ 230 VAC; Amps:	0.3 Amps @ 230 VAC

Custom Engineered Designs – Pre-Engineered Systems



Pre-Engineered Systems

Pulsafeeder's Pre-Engineered Systems are designed to provide complete chemical feed solutions for all electronic metering applications. From stand alone simplex pH control applications to full-featured, redundant sodium hypochlorite disinfection metering, these rugged fabricated assemblies offer turn-key simplicity and industrial-grade durability. The UV-stabilized, high-grade HDPE frame offers maximum chemical compatibility and structural rigidity. Each system is factory assembled and hydrostatically tested prior to shipment.

novatech
INTERNATIONAL

sales@novatech-usa.com
www.novatech-usa.com
Tel: (866) 433-6682 Fax: (866) 433-6684
Tel: (281) 359-8538 Fax: (281) 359-0084

PULSAFEEDER®

27101 Airport Road
Punta Gorda, FL 33982
Phone: ++1(941) 575-3800
Fax: ++1(941) 575-4085

www.pulsatron.com



An ISO 9001 Certified Company

EMP029 G15

IDEX
FLUID & METERING